



StreamConnect for Genetec™ Security Center

Version 2.1

Installation and User's Guide

Copyright © 2026 Allied Telesis, Inc.

All rights reserved. No part of this publication may be reproduced without prior written permission from Allied Telesis, Inc.

Microsoft and Internet Explorer are registered trademarks of Microsoft Corporation. All other product names, company names, logos or other designations mentioned herein are trademarks or registered trademarks of their respective owners.

Allied Telesis, Inc. reserves the right to make changes in specifications and other information contained in this document without prior written notice. The information provided herein is subject to change without notice. In no event shall Allied Telesis, Inc. be liable for any incidental, special, indirect, or consequential damages whatsoever, including but not limited to lost profits, arising out of or related to this manual or the information contained herein, even if Allied Telesis, Inc. has been advised of, known, or should have known, the possibility of such damages.

Contents

Chapter 1: Overview	5
Introduction	6
Guidelines for StreamConnect	6
Network Configurations for VMS.....	7
Standard Network Configuration for VMS	7
Genetec™ Security Center Configurations with StreamConnect	7
Network Configuration with Security Center Federation™	11
Security Center Federation™ Configuration.....	11
 Chapter 2: Installing and Configuring StreamConnect	 13
Before Installing StreamConnect	14
Hardware Requirement	14
Software Requirements	14
Genetec™ Licensing Requirement.....	14
Installing StreamConnect on Your System	16
Configuring StreamConnect Using Config Tool	18
Verifying that StreamConnect is Up and Running	21
Configuring ATI Switch and Cameras	24
Guidelines for Configuring ATI Switch and Cameras	24
Adding an Allied Telesis Switch.....	24
Associating Cameras to Allied Telesis Switch Ports	27
 Chapter 3: Managing ATI Switch Ports and User Access	 31
Managing the Allied Telesis Switch Ports Connected to Cameras	32
Viewing the Power Consumption on the ATI Switch and Ports	32
Enabling Ports and Power over Ethernet, or Modifying Power Allocation	34
Rebooting the ATI Switch	35
Enabling Ports and Power over Ethernet Using Security Desk	36
Managing User Access	38
StreamConnect Privileges	38
Guidelines to Setting ATI StreamConnect Privileges	39
Assigning ATI StreamConnect Privileges for a User or User Group	39
Limiting User Access to Cameras, Switch, StreamConnect	41

Creating a Partition 41

Moving Entities into the Partition 44

Moving Plugin Instances into the Partition..... 45

Limiting a User or User Group to Access only Entitles in Partitions 46

Accessing StreamConnect in Security Center Federation™ 48

Chapter 1

Overview

This chapter includes the following sections:

- ❑ “Introduction” on page 6
- ❑ “Network Configurations for VMS” on page 7
- ❑ “Network Configuration with Security Center Federation™” on page 11

Introduction

StreamConnect for Genetec™ Security Center is a plugin to Genetec™ video management system (VMS) where the surveillance cameras are connected to Allied Telesis (ATI) Power over Ethernet (PoE) switches.

StreamConnect allows you to perform tasks such as rebooting the surveillance cameras and managing port power allocations in Genetec™ Security Center without network administrator credentials.

Security Center, developed by Genetec™, includes a system that manages surveillance cameras and recordings. Surveillance cameras are often connected to and powered by PoE switches, such as Allied Telesis PoE switches.

Guidelines for StreamConnect

Here are guidelines for network configurations for StreamConnect:

- ❑ StreamConnect supports multi-server configurations as well as single-server configurations.
- ❑ StreamConnect supports the Allied Telesis Layer 2 and Layer 3 PoE switches.
- ❑ StreamConnect version 2.1 or later supports Security Center Federation™.
- ❑ StreamConnect is not designed to be used with switches configured in the Virtual Chassis Stacking (VCS) mode.

Network Configurations for VMS

This section explains a standard network configuration for VMS and network configurations that Allied Telesis supports for StreamConnect for Genetec™ Security Center.

Standard Network Configuration for VMS

Figure 1 shows a standard network configuration for a VMS installation. In this configuration, networks for surveillance cameras and client machines are separated. Cameras are physically exposed to potential intruders so that segregating the camera network provides security to the internal management networks. Separating networks also prevents video traffic caused by the cameras from consuming bandwidth on the client network.

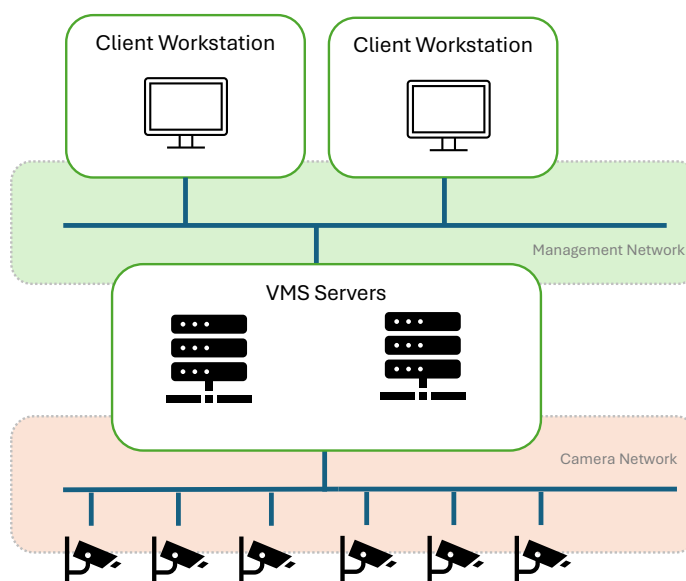


Figure 1. Standard Network Configuration for VMS

Genetec™ Security Center Configurations with StreamConnect

Network configurations with Genetec™ Security Center that Allied Telesis supports for StreamConnect are:

- ❑ “Single-Server Security Center Configuration with the Allied Telesis Switch” on page 8
- ❑ “Multiple-Server Security Center Configuration with the Allied Telesis Switch” on page 9
- ❑ “Security Center Configuration with Allied Telesis Layer 3 Switch” on page 10

These network configurations also provide security to the internal management networks and prevent video traffic from consuming bandwidth on the client network. In addition, the AlliedWare Plus™ PoE switch simplifies cabling and maintenance for the cameras because a PoE switch delivers both data and power to connected devices through the Ethernet cables.

Single-Server Security Center Configuration with the Allied Telesis Switch

A network configuration with only a main server and surveillance cameras connected to AlliedWare Plus™ PoE switches is shown in Figure 2.

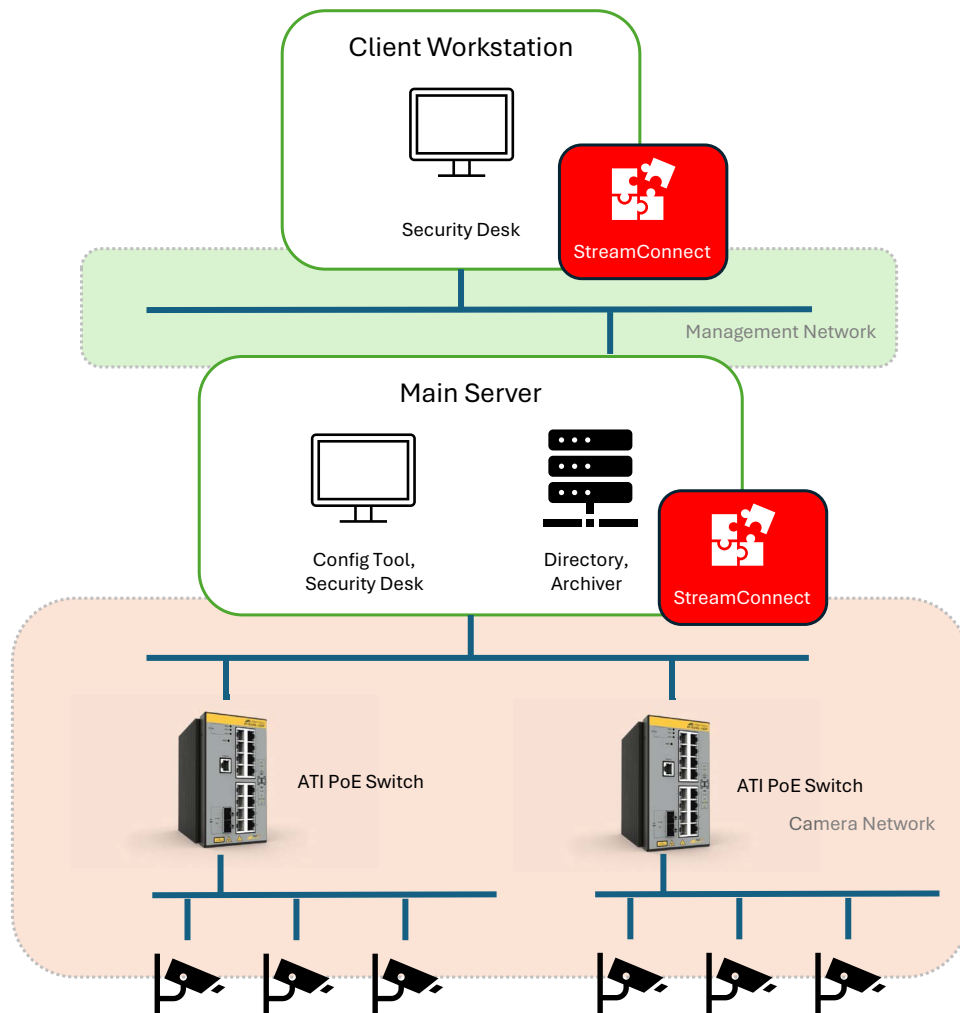


Figure 2. Single-Server VMS Configuration with Allied Telesis Switch

In the network configuration above, the Security Center client communicates with the ATI PoE switches via the main server.

Multiple-Server Security Center Configuration with the Allied Telesis Switch

Figure 3 shows a network configuration with multiple expansion servers. An archiver is running on each expansion server, which is connected to a private camera network.

As shown in Figure 3, a StreamConnect instance must be created on each expansion server that an ATI switch is connected to, in addition to the main server and client workstation.

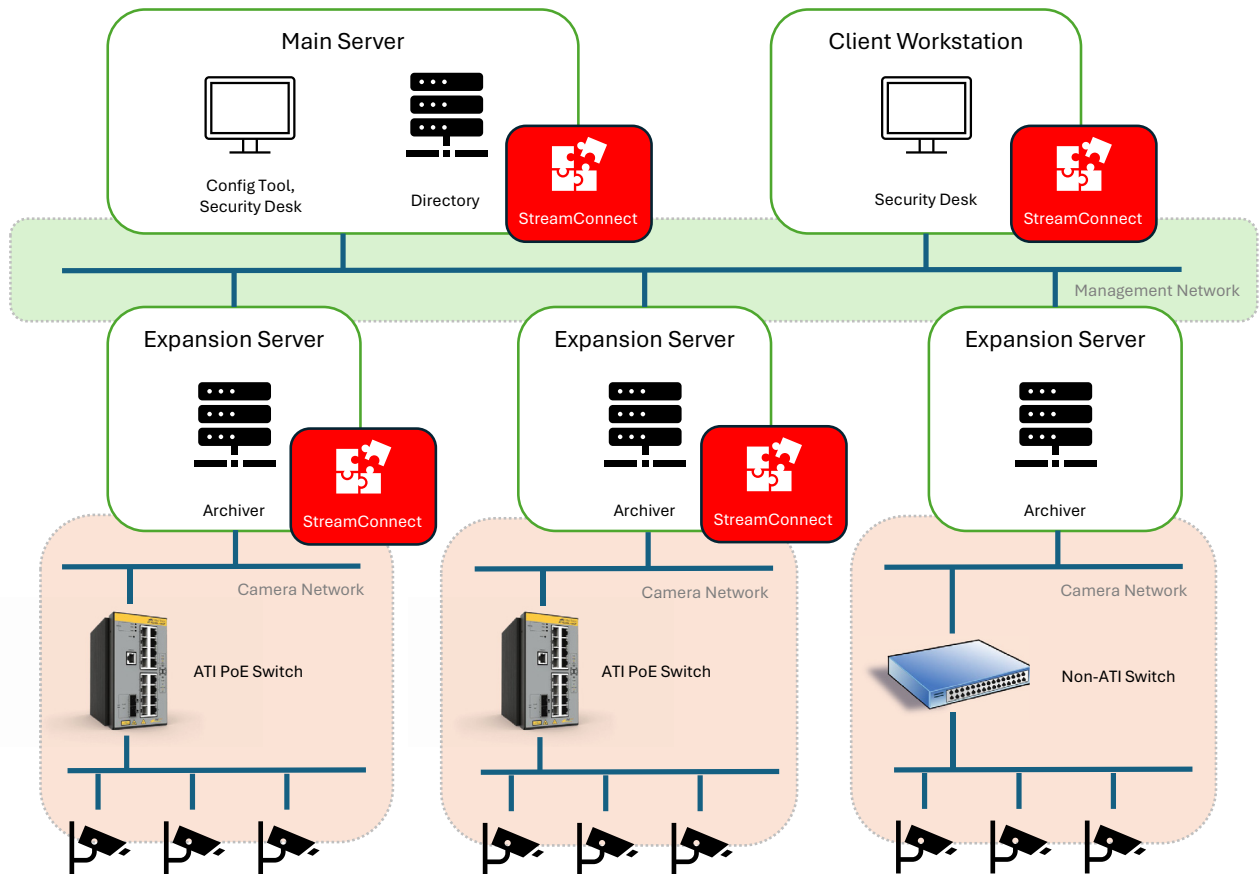


Figure 3. Multiple Expansion Servers with StreamConnect

StreamConnect supports networks where multiple servers are configured as well as a single server configuration.

Security Center Configuration with Allied Telesis Layer 3 Switch

StreamConnect supports a VMS network configuration with the Allied Telesis Layer 3 switch. You can simplify a network configuration with an ATI PoE Layer 3 switch. Figure 4 shows that the ATI PoE Layer 3 switch's routing capability provides security by separating the camera network and management network.

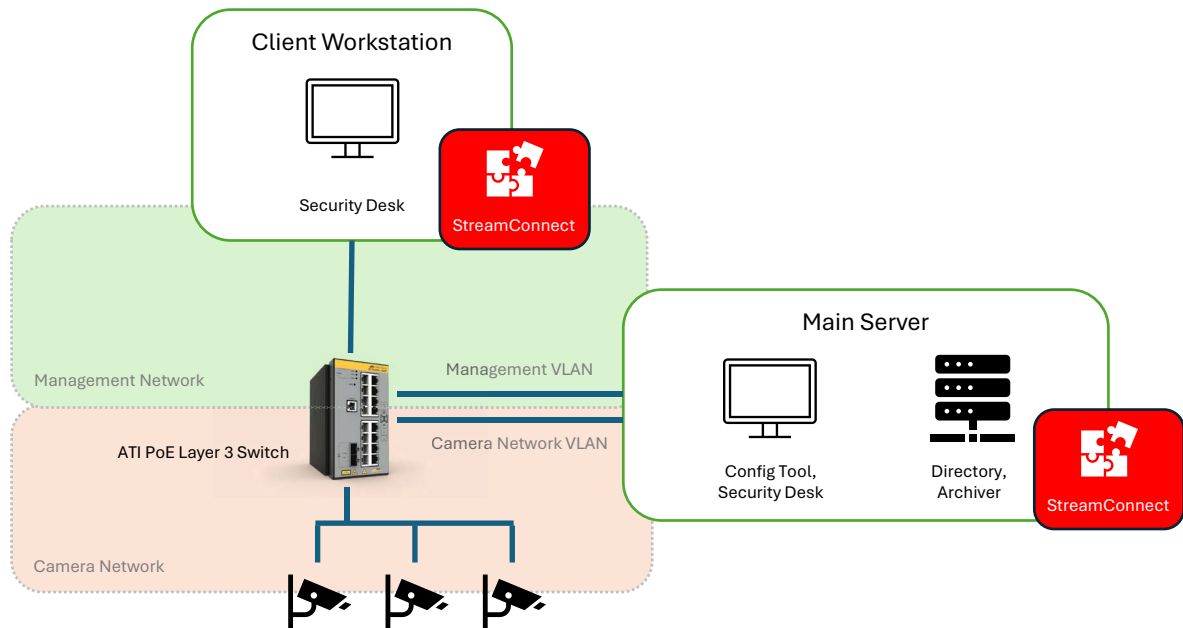


Figure 4. Security Center Configuration with Allied Telesis Layer 3 Switch

Network Configuration with Security Center Federation™

Security Center Federation™ is a feature that links multiple independent, geographically dispersed security systems into a single virtual system. The Security Center Federation™ system allows operators on a guest system (at remote site) to monitor, view, and control devices and events on the host system.

StreamConnect in Security Center Federation™ allows operators on a guest system to perform tasks such as rebooting the cameras and managing port power allocations on the ATI PoE switches on the host system.

Security Center Federation™ Configuration

StreamConnect supports Security Center Federation™ configurations. See Figure 5 as an example.

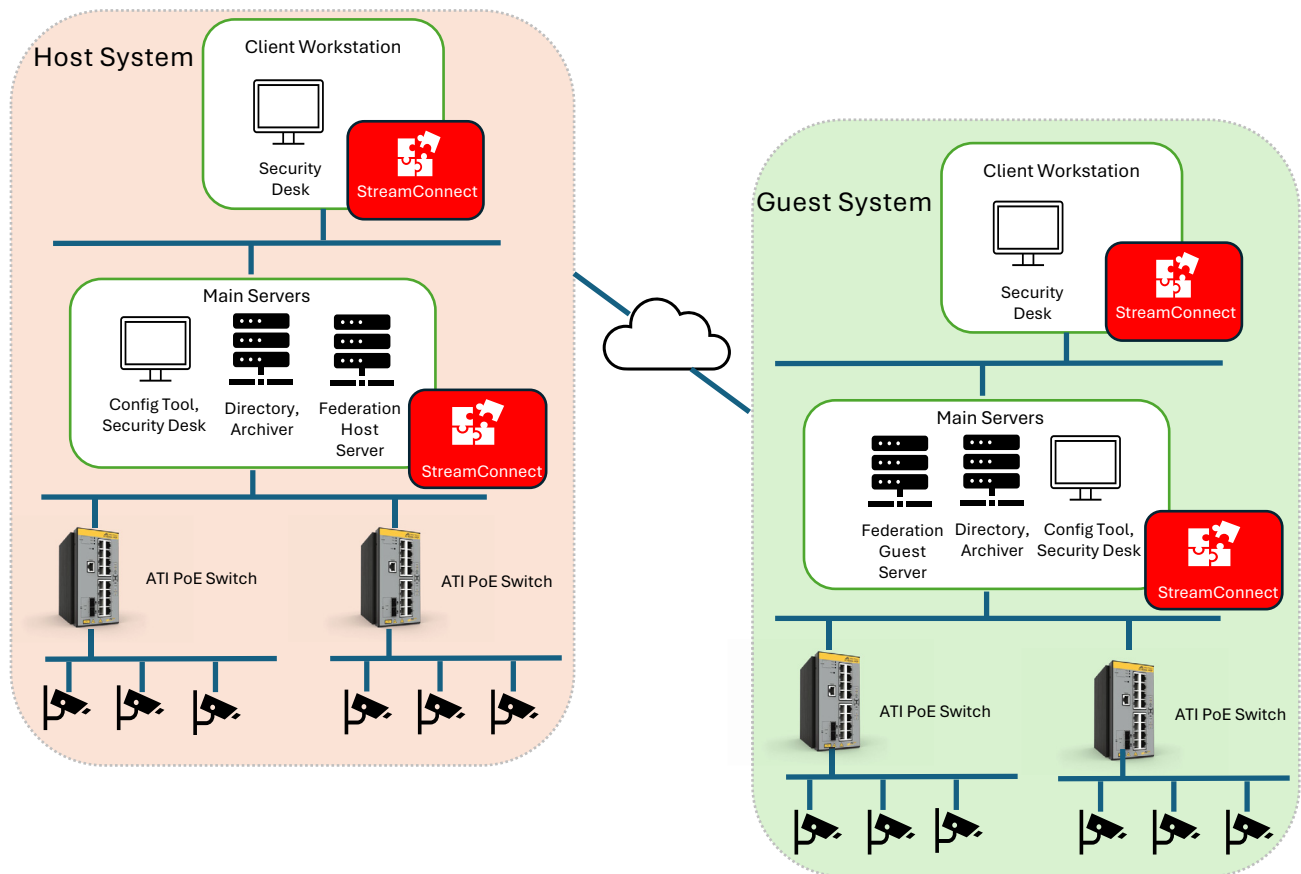


Figure 5. Security Center Federation™ with StreamConnect

Chapter 2

Installing and Configuring StreamConnect

This chapter includes the following sections:

- ❑ “Before Installing StreamConnect” on page 14
- ❑ “Installing StreamConnect on Your System” on page 16
- ❑ “Configuring StreamConnect Using Config Tool” on page 18
- ❑ “Configuring ATI Switch and Cameras” on page 24

Before Installing StreamConnect

You need to Install the StreamConnect plugin on all machines: the main server, expansion servers, and client-only machines. After StreamConnect is successfully installed, configure the plugin using Genetec™ Security Center **Config Tool**.

Hardware Requirement

StreamConnect is compatible with any AlliedWare Plus™ PoE-capable Layer 2 and Layer 3 switches. AlliedWare Plus™ is an operating system for Allied Telesis switch and router products.

Software Requirements

Here is a list of software requirements:

- ☐ AlliedWare Plus™ version 5.5.4 or later for Allied Telesis switches
- ☐ Genetec™ Security Center software version 5.13.2.0 or later
- ☐ Before StreamConnect is installed, Genetec™ Security Center software must already be installed on your system.
- ☐ The one of the following Operating Systems for the servers and/or client machines:
 - Windows 11
 - Windows 11 IoT Enterprise
 - Windows 10 IoT Enterprise

Genetec™ Licensing Requirement

To run StreamConnect in Genetec™ Security Center, you must have an integration license from Genetec™ on your system. This license provides a pool of connection instances that are shared across all StreamConnect components.

To order the license, contact your Genetec™ channel partner or sales representative and provide them with:

- ☐ Part number: GSC-1SDK-AlliedTelesis-StreamC
- ☐ Quantity: the number of instances required for your deployment

Each unit of this part number adds one connection instance to the pool. For example, for 4 connection instances, order 4 units of GSC-1SDK-AlliedTelesis-StreamC. Each active plugin role instance or open StreamConnect component consumes one connection instance from the license pool.

For example, the tile widget  in **Tasks** or ATI Switch Management task in **Config Tool** or **Security Desk** is counted as one instance.

Note

When a component is closed or a plugin role is deactivated, the instance is released back to the license pool.

To verify available instances, open **Config Tool > About > Certificates** and check the row labeled StreamConnect in Figure 6.

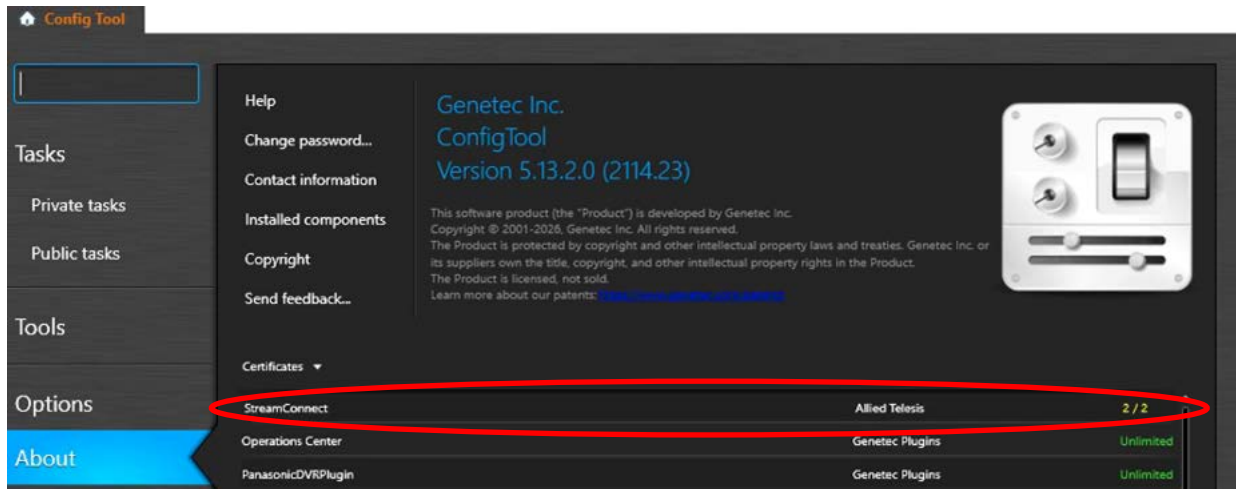


Figure 6. StreamConnect for Genetec™ Security Center Certificates

Installing StreamConnect on Your System

To install StreamConnect to Security Center on your Windows system:

1. Ensure that your system meets “Hardware Requirement” and “Software Requirements” on this page.
2. Download the StreamConnect installer onto your system.
3. Close the **Config Tool**  and **Security Desk**  applications if they are running.
4. Click the StreamConnect installer. For example:

 Allied Telesis StreamConnect for Genetec 2.n.n.n

5. When Microsoft Defender SmartScreen gives you a warning, click the **More info** link, then click **Run anyway** as shown in Figure 7.

Note

You might receive multiple warnings from Microsoft Defender.

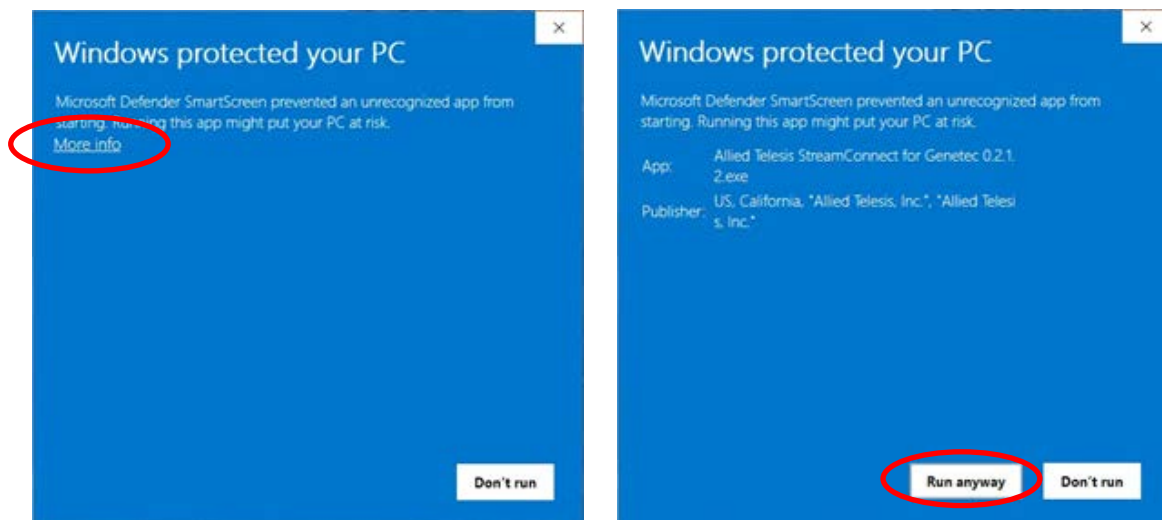


Figure 7. Defender SmartScreens

6. On the User Account Control dialog box, click **Yes** to allow the Installer to proceed. See Figure 8 on page 17.

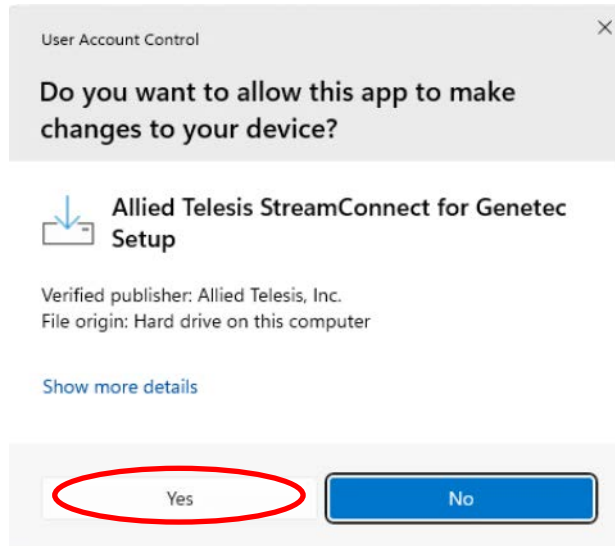


Figure 8. User Account Control Dialog Box

7. On the next Setup screen, click **Install**.
Wait until the installation process is completed.
8. When the Setup screen notifies you that the installation is completed, click **Finish**.
9. Go to "Configuring StreamConnect Using Config Tool" on page 18.

Configuring StreamConnect Using Config Tool

After installing StreamConnect, start **Config Tool** and configure StreamConnect.

Here are guidelines for configuring StreamConnect:

- ❑ If you have only a main server, create one StreamConnect instance.
- ❑ If you have one or more expansion servers, create a StreamConnect instance on every server that is running an archiver, which is connected to its own separate private camera network that includes an ATI switch. See Figure 3 on page 9.
- ❑ Name the instance with a unique name, especially when the system has multiple expansion servers.

To configure StreamConnect:

1. Open **Config Tool** and log in.

The **Config Tool** window appears.

2. Click the **Plugins** icon as shown in Figure 9.

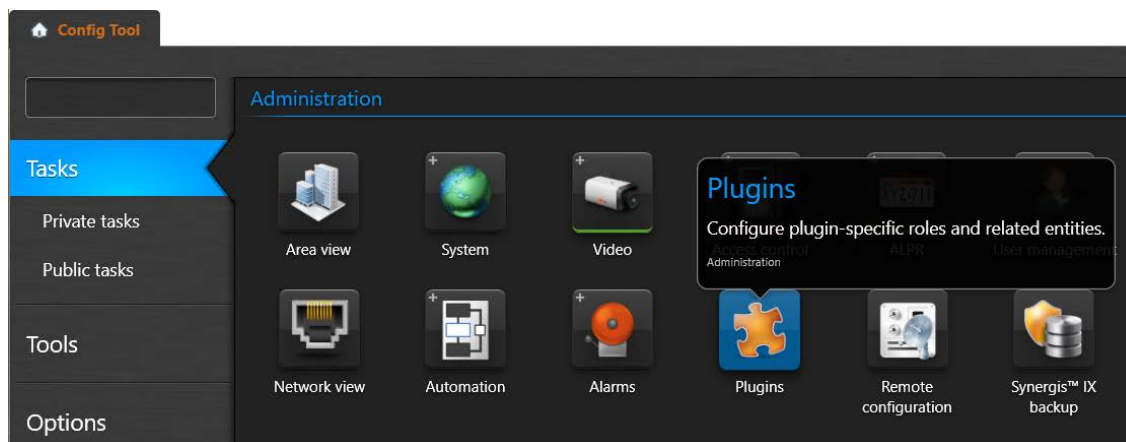


Figure 9. **Config Tool** Window

3. Right-click the name of a server in the left pane and select **Add an Entity > Plugin**. See Figure 10 on page 19.

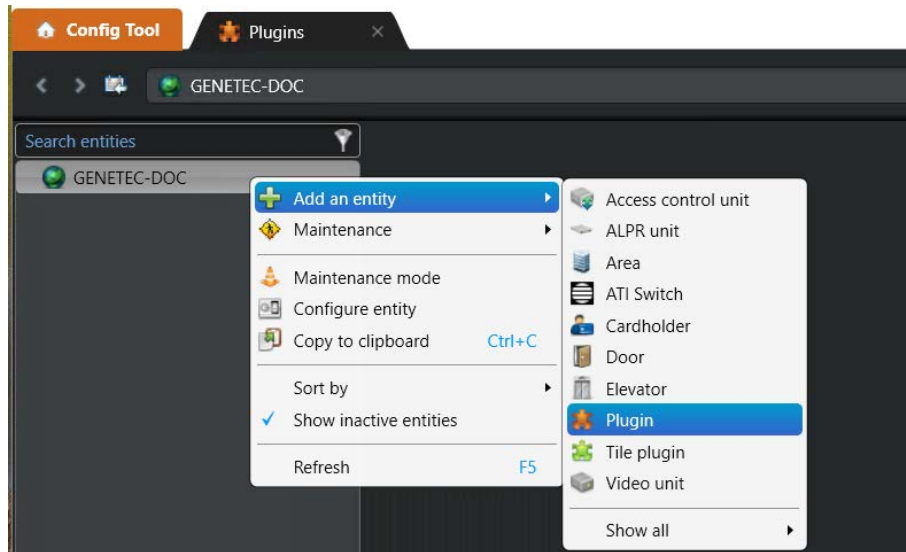


Figure 10. Adding StreamConnect Plugin

If you have only a main server, the **Creating a role: Plugin** window as shown in Figure 11 appears.

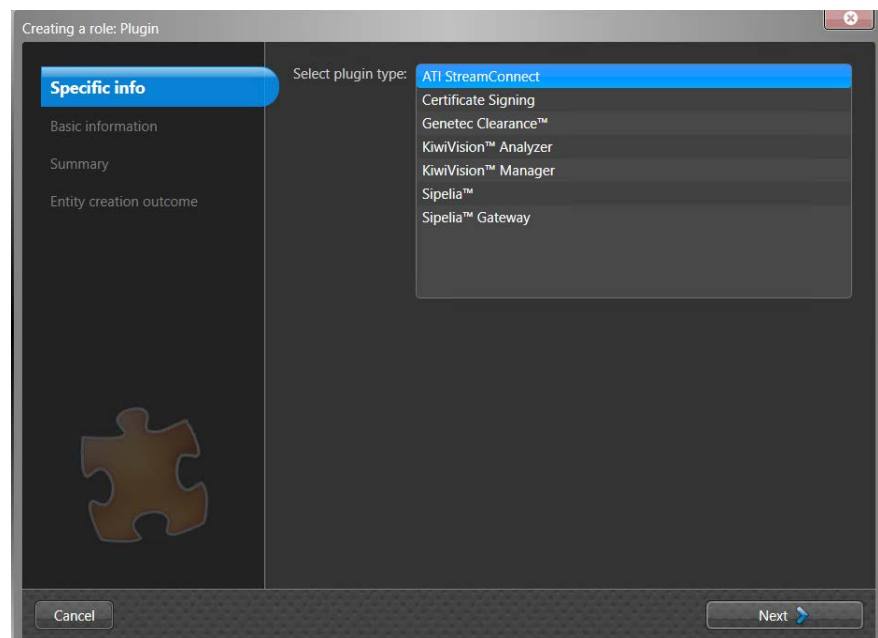


Figure 11. The Creating a role: Plugin Window

If you have one or more expansion servers, the **Creating a role: Plugin** window as shown in Figure 12 on page 20 appears.

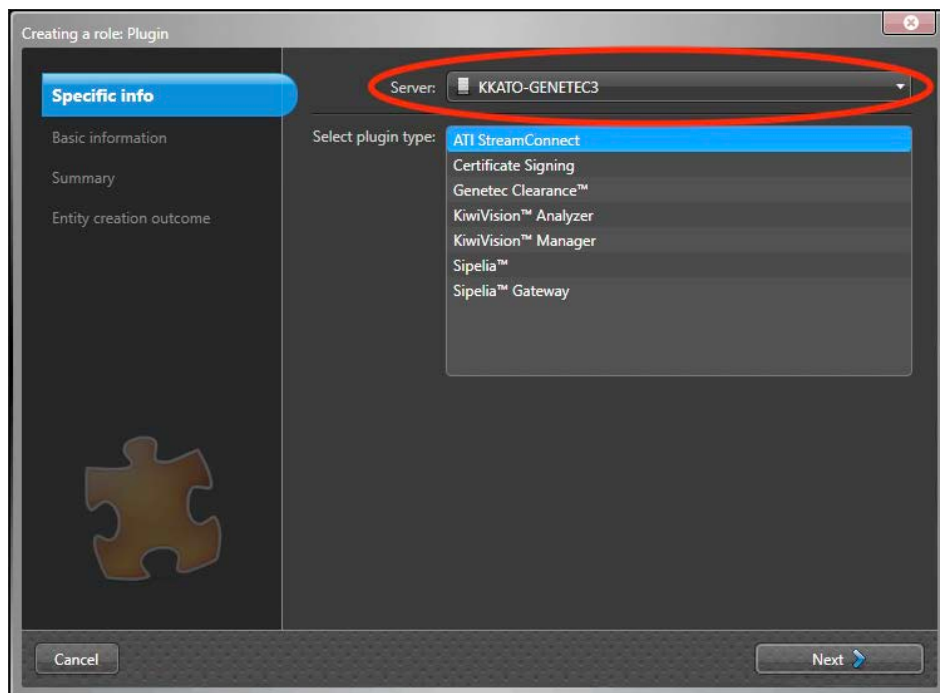


Figure 12. The Creating a role: Plugin Window with Expansion Servers

4. Select a server in the **Server** drop-down menu in Figure 12.
Skip this step if you have no server selections in Figure 11 on page 19.
5. Select **ATI StreamConnect** as a plugin type and click **Next**.
6. On the **Basic information** page, enter a name to the plugin. See Figure 13 on page 21.

Note

If you have expansion servers configured, Allied Telesis strongly recommends assigning a name to the plugin to associate with the server, instead of the default name.

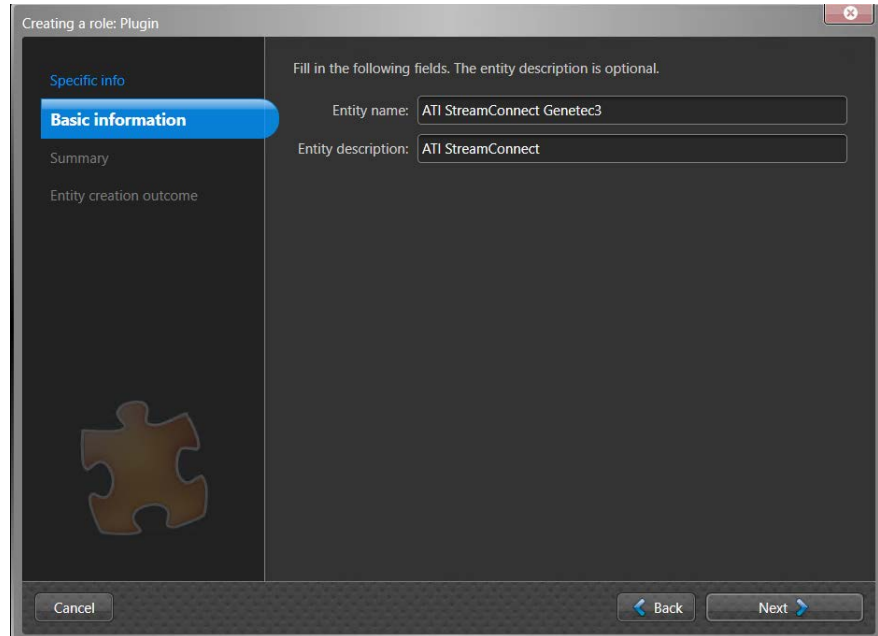


Figure 13. The Creating a role: Plugin Window - Basic Information

7. Click **Next**.

The **Summary** page appears.

8. On the **Summary** page, verify the information and click **Create**.
9. Wait a few moments for ATI StreamConnect to load and start.

You receive a message that the operation was successful. See Figure 14.

 


Figure 14. StreamConnect Configuration is Done

10. If you have multiple expansion servers (archivers), repeat Step 4 to Step 9 to create a StreamConnect instance per server.

Verifying that StreamConnect is Up and Running

To verify that StreamConnect is running correctly:

1. Open **Config Tool** and log in.

The **Config Tool** window appears.

2. Click the **Plugins** icon as shown in Figure 9 on page 18.

3. Select the name of an ATI StreamConnect instance in the left pane.
4. Right-click **Maintenance > Diagnose** on the bottom menu. See Figure 15.

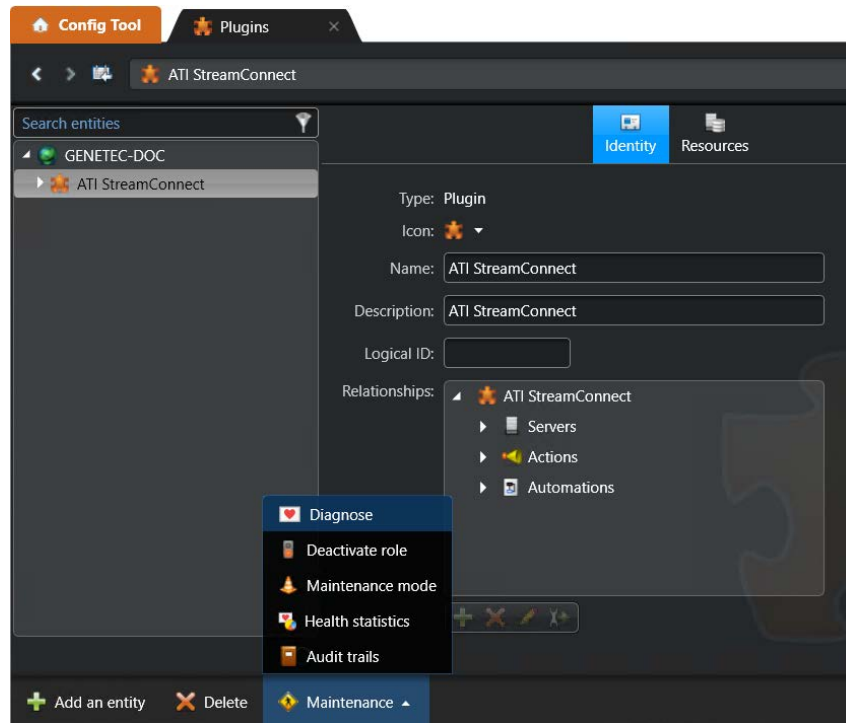


Figure 15. StreamConnect > Maintenance > Diagnose

If the **Diagnosis** window in Figure 16 appears, StreamConnect is up and running.

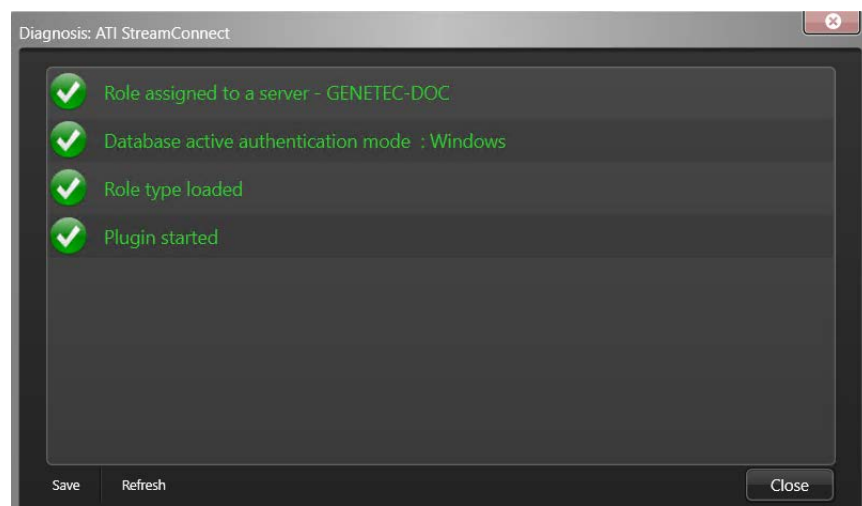


Figure 16. Diagnosis Window

If the **Diagnosis** window in Figure 17 appears, the plugin role fails to start.

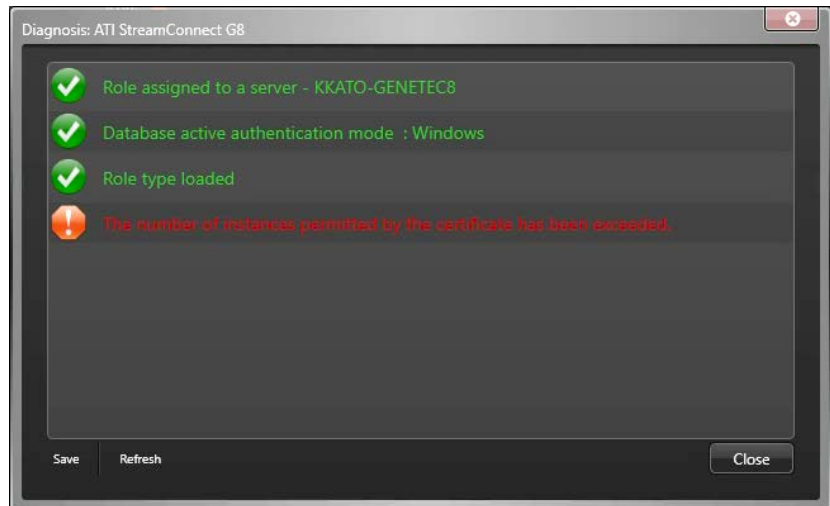


Figure 17. Diagnosis Window with an Error

If sufficient StreamConnect instances are *not* available in the license pool, the **Diagnosis** window displays the message: "The number of instances permitted by the certificate has been exceeded."

For more information, go to "Genetec™ Licensing Requirement" on page 14.

Configuring ATI Switch and Cameras

After installing and configuring StreamConnect for Genetec™ Security Center, or when having new surveillance cameras connected to the Allied Telesis switch in your camera network, perform the following tasks:

1. "Adding an Allied Telesis Switch" on page 24.

If the Allied Telesis switch has already been added, select your switch and skip the switch configuration steps.

2. Adding a Surveillance Camera.

If cameras have already been added, skip this task.

3. "Associating Cameras to Allied Telesis Switch Ports" on page 27.

If you need to access the Allied Telesis switch for the basic switch settings, such as the switch's management IP address and administrative user credentials or for upgrading AlliedWare Plus™ firmware to version 5.5.4 or later, visit the Allied Telesis website at:

- ❑ [Getting Started with the AlliedWare Plus Command Line Interface](#)
- ❑ [AlliedWare Plus Feature Overview and Configuration Guides](#)

Guidelines for Configuring ATI Switch and Cameras

Here are guidelines for configuring the ATI switch and cameras:

- ❑ When configuring the ATI switch, use the administrative account. Without administrative privilege, you can manage surveillance cameras, but not ATI switches.
- ❑ Allied Telesis recommends using Power over Ethernet (PoE) ports on the switch for surveillance cameras and non-PoE ports as uplink ports. If a PoE port is used as an uplink port, the system might mistakenly detect a camera elsewhere in the network as if it is connected to the PoE port.

Adding an Allied Telesis Switch

To add an Allied Telesis switch to Genetec™ Security Center:

1. Ensure that Allied Telesis switches are cabled and powered on.
2. Open **Config Tool** and log in.

The **Config Tool** window appears.

3. Click the **Area View** icon on the **Config Tool > Tasks** page. See Figure 18 on page 25.

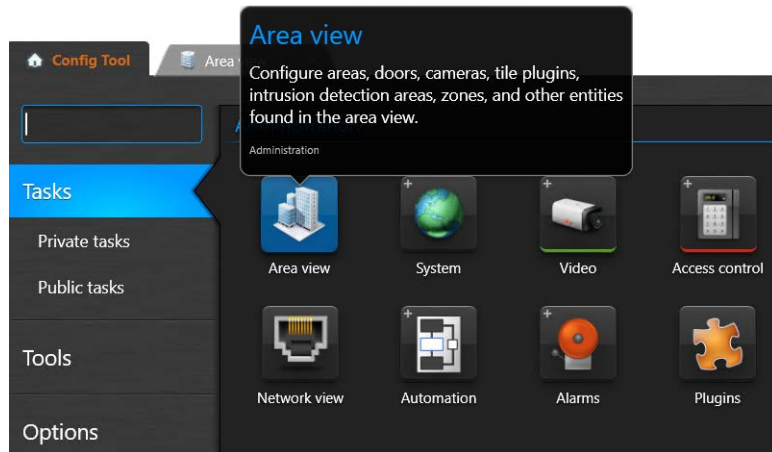


Figure 18. Config Tool > Tasks > Area View

The **Area View** page appears.

4. Select **Add an entity > ATI Switch** from the bottom menu. See Figure 19.

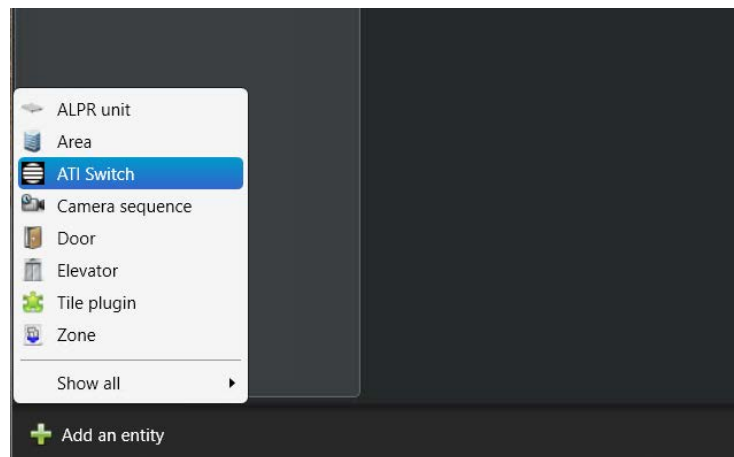


Figure 19. Adding an ATI Switch

A configuration page for a new ATI switch appears.

5. Assign a unique name to the switch. See Figure 20.

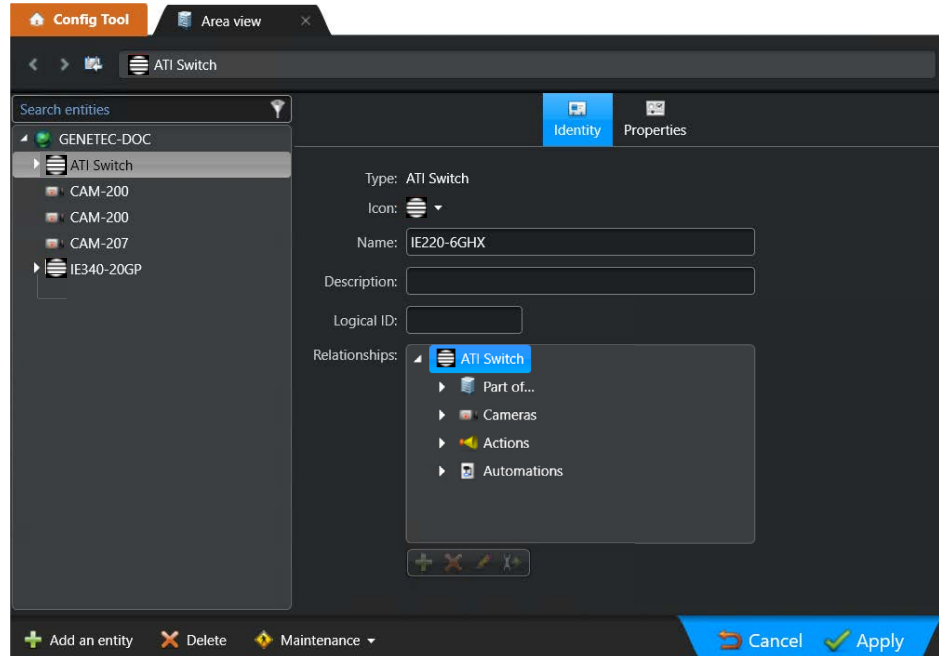


Figure 20. Adding a Name to New ATI Switch

In this example, "IE220-6GHX" is a name to be assigned to the new ATI switch.

6. Click **Apply**.

The name is assigned to the new ATI switch.

7. Click **Properties** as shown in Figure 21.

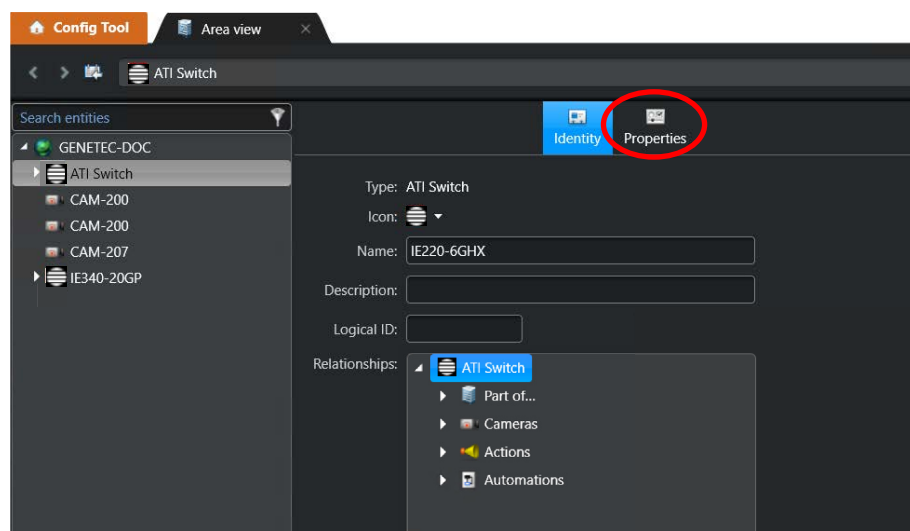


Figure 21. Adding an ATI Switch - Properties

8. Enter the following fields on the ATI switch properties page as shown in Figure 22.

- ☐ Assigned To
- ☐ IP Address
- ☐ User Name
- ☐ Password

Note

You must select the correct StreamConnect instance in the **Assigned To** drop-down menu for your ATI switch if multiple StreamConnect instances are running on different servers. For more information, see Figure 3 on page 9.

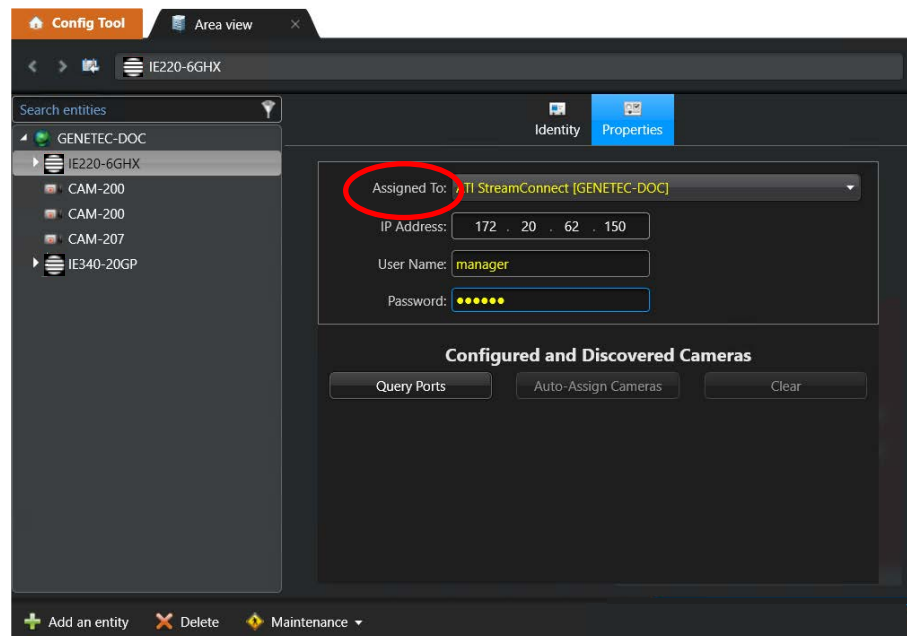


Figure 22. Setting the Switch IP Address and Login Credential

9. Click **Apply**.

The ATI switch is added.

Associating Cameras to Allied Telesis Switch Ports

To associate the surveillance cameras to Allied Telesis switch ports:

1. Ensure that the cameras and Allied Telesis switches are cabled and powered on.
2. Open **Config Tool** and log in.

The **Config Tool** window appears.

3. Click **Area View**.

4. Select an ATI switch in the left pane.
5. Click **Properties**, as shown in Figure 22 on page 27,
6. Click **Query Ports**.

A list of ports is displayed with the current camera assignments.

7. To assign cameras to switch ports automatically, click **Auto-Assign Cameras**.

Note

The **Auto-Assign Cameras** function detects which switch ports cameras are connected to if the cameras are plugged in and powered on.

Cameras are assigned to ports. See Figure 23.

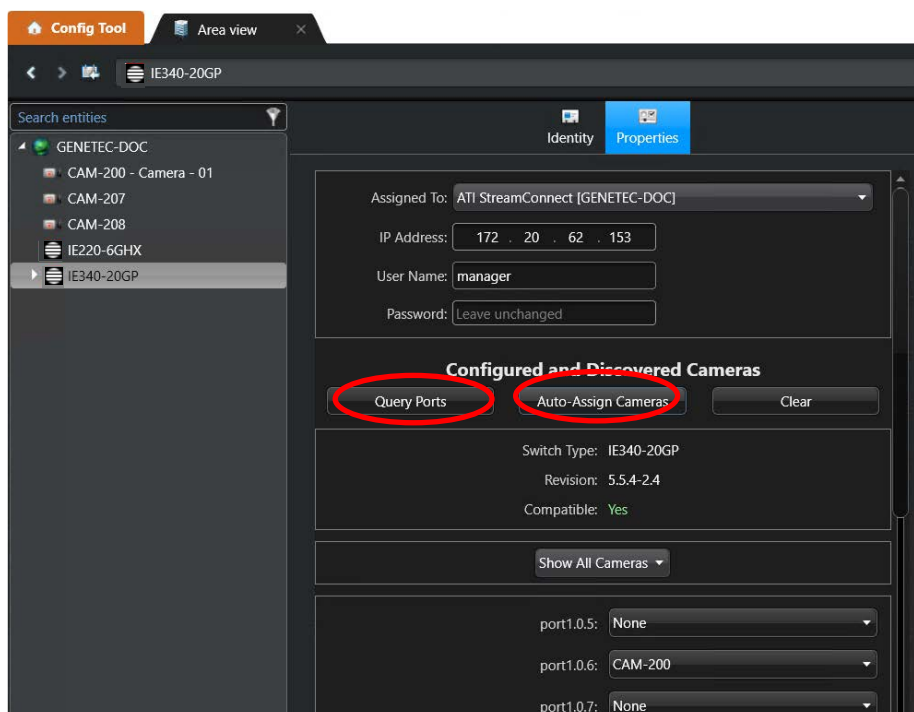


Figure 23. Displaying Ports and Associate Cameras

8. Click **Apply** to save the camera assignment.
9. To assign cameras manually, click a drop-down menu for the port that you want to assign a camera.
10. Select a camera from the drop-down menu.
11. If the camera that you want to assign to the port does not appear in the drop-down menu, select **Other...** as shown in Figure 24 on page 29.

Note

If cameras do not appear in the port drop-down menu, they may not be plugged in or powered on.

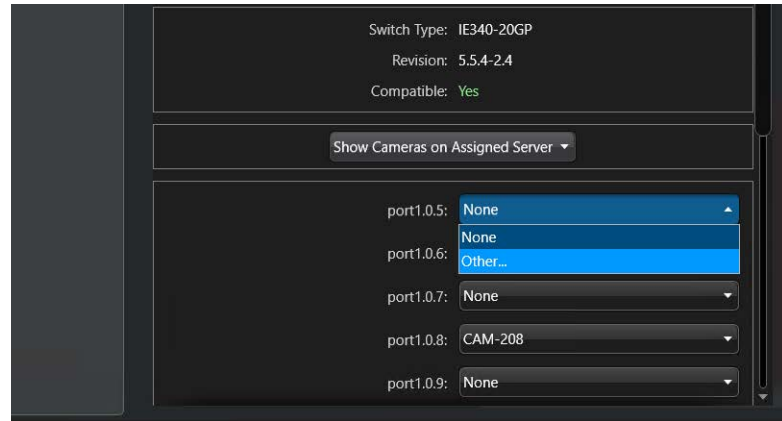


Figure 24. Assigning a Camera Manually

The Camera Selection window appears.

12. Select a camera to assign to the port from the drop-down menu. See Figure 25.

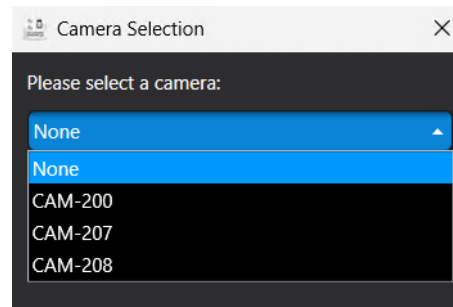


Figure 25. Selecting a Camera to Assign to a Port

Note

The available cameras for port assignment are normally limited to cameras that are associated with an archiver of the same server as the StreamConnect instance. If you want to select cameras other than the cameras on the same server, click **Show Cameras on Assigned Server** to change it to **Show All Cameras**.

13. Click **OK**.
14. Click **Apply** when a change confirmation window appears.

The camera assignment is saved.

Chapter 3

Managing ATI Switch Ports and User Access

This chapter includes the following sections:

- ❑ “Managing the Allied Telesis Switch Ports Connected to Cameras” on page 32
- ❑ “Managing User Access” on page 38
- ❑ “Limiting User Access to Cameras, Switch, StreamConnect” on page 41
- ❑ “Accessing StreamConnect in Security Center Federation™” on page 48

Managing the Allied Telesis Switch Ports Connected to Cameras

After associating cameras to ATI switch ports, you can perform the following tasks:

- ❑ “Viewing the Power Consumption on the ATI Switch and Ports,” next
- ❑ “Enabling Ports and Power over Ethernet, or Modifying Power Allocation” on page 34
- ❑ “Rebooting the ATI Switch” on page 35
- ❑ “Enabling Ports and Power over Ethernet Using Security Desk” on page 36

Viewing the Power Consumption on the ATI Switch and Ports

To view the current power usage of a switch port:

1. Ensure that the cameras and Allied Telesis switch are cabled and powered on.
2. Open **Config Tool** or **Security Desk** and log in.

The **Config Tool** or **Security Desk** window appears.

Note

To access ATI Switch Management using **Security Desk**, you must log in as a user with appropriate permissions. See “Managing User Access” on page 38.

3. Click the **ATI Switch Management** icon. See Figure 26.

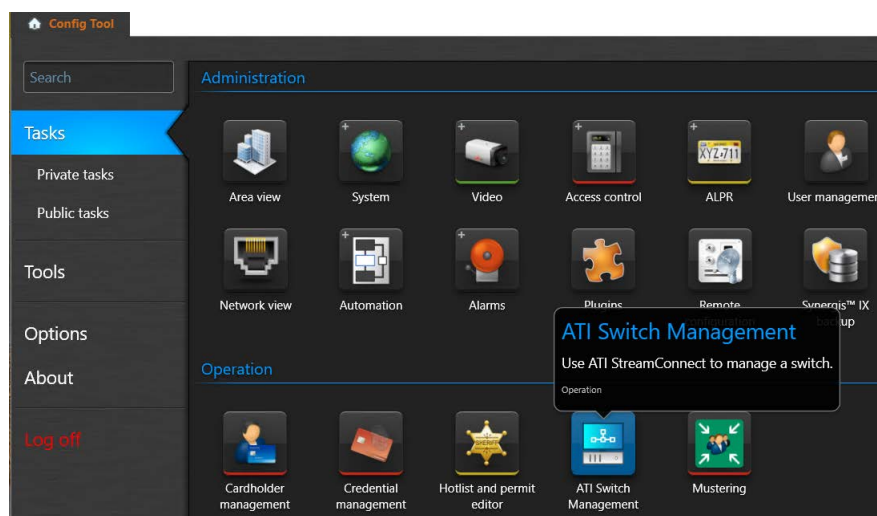


Figure 26. ATI Switch Management

If the **Allied Telesis** StreamConnect page in Figure 27 appears, go to Step 4.

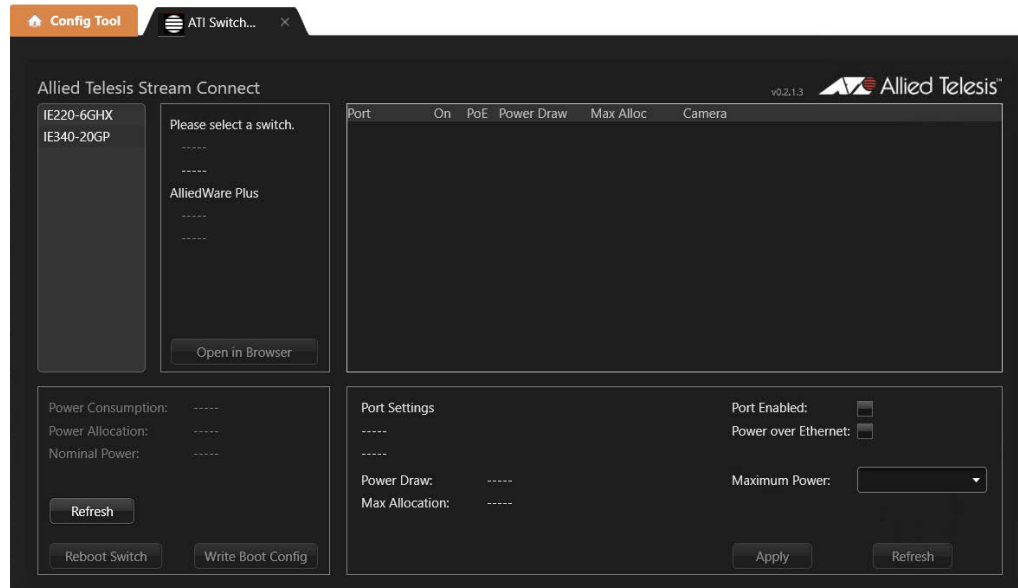


Figure 27. ATI Switch Management Page

The warning in Figure 28 appears when the ATI Switch Management task fails to open.

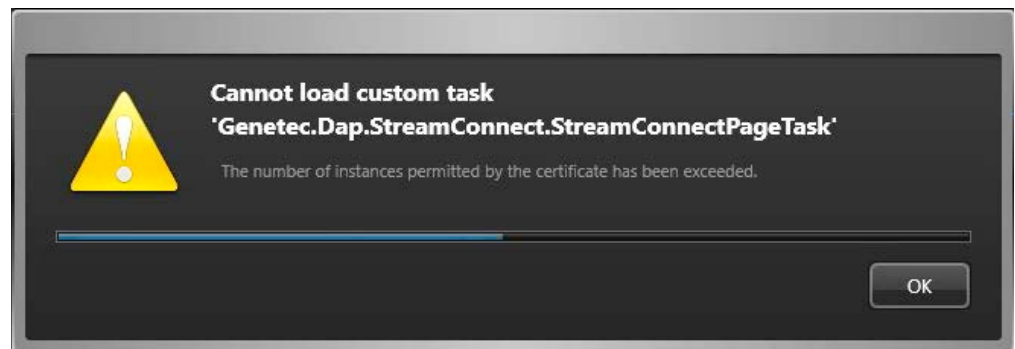


Figure 28. Warning: Insufficient Instances are Available on the License

If sufficient StreamConnect instances are *not* available in the license pool, the warning window displays the message: "The number of instances permitted by the certificate has been exceeded."

For more information, go to "Genetec™ Licensing Requirement" on page 14.

4. Click a switch, then a port that your camera is connected to.

The switch and port information are displayed. See Figure 29 on page 34.

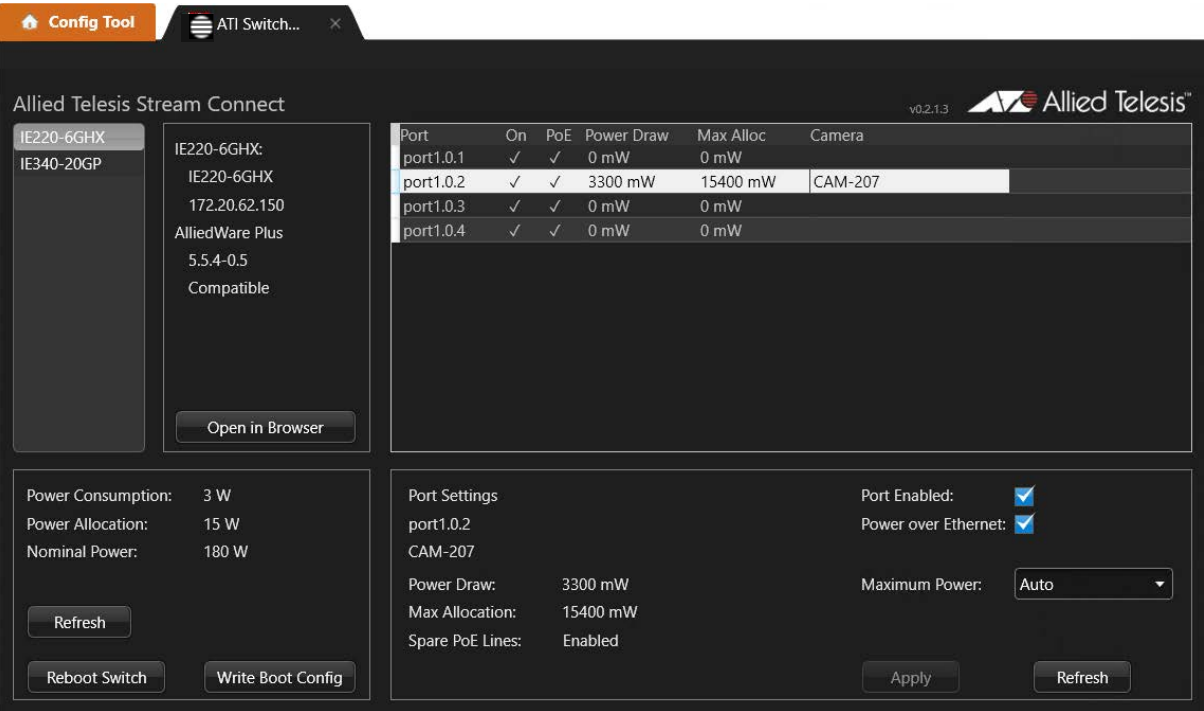


Figure 29. ATI Switch Management with Switch and Port Information

**Enabling Ports
and Power over
Ethernet, or
Modifying Power
Allocation**

To enable and disable the switch port or Power over Ethernet on the port, or to modify the maximum power setting for the port:

1. Display the ATI Switch Management page as shown in Figure 29.
See “Viewing the Power Consumption on the ATI Switch and Ports” on page 32.
2. Find the port information section as shown in Figure 30.

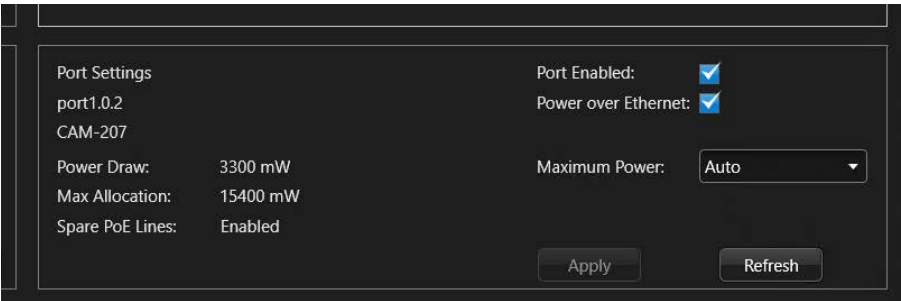


Figure 30. Port Information on ATI Switch Management Page

3. To disable the port, uncheck the checkbox for the **Port Enabled**.
To enable the port, check the checkbox for the **Port Enabled**.

4. To disable PoE on the port, uncheck the checkbox for the **Power over Ethernet**.

To enable the port, check the checkbox for the **Power over Ethernet**.

5. To modify the maximum power on the power, select one of the options in the drop-down menu for **Maximum Power**.
6. Click **Apply**.

The changes you made are applied.

7. Click **Write Boot Config**. See Figure 31.

Note

Clicking **Write Boot Config** updates the switch's boot configuration. Your changes remain after you reboot the switch.

Rebooting the ATI Switch

To reboot an ATI switch:

1. Display the ATI Switch Management page as shown in Figure 29 on page 34.

See "Viewing the Power Consumption on the ATI Switch and Ports" on page 32.
2. Find the switch power information section. See Figure 31.

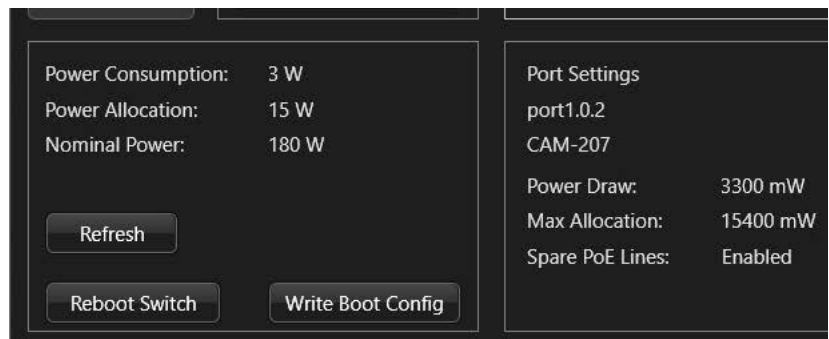


Figure 31. Switch Power Information on ATI Switch Management Page

3. Click **Write Boot Config** if necessary.

Note

Clicking **Write Boot Config** updates the switch's boot configuration. Your changes remain after you reboot the switch.

4. To reboot the switch, click **Reboot Switch**.

The switch is rebooted.

Enabling Ports and Power over Ethernet Using Security Desk

To enable and disable the switch port or Power over Ethernet on the port using **Security Desk**:

1. Open **Security Desk** and log in.

The **Security Desk** window appears.

Note

To access ATI Switch Management using **Security Desk**, you must log in as a user with appropriate permissions. See “Managing User Access” on page 38.

2. Click the **Monitoring** icon. See Figure 32.



Figure 32. Monitoring on Security Desk Window

The **Monitoring** page appears.

3. Double-click the camera name in the left pane or drag the camera name to a middle pane to select the camera. See Figure 33 on page 37.

The port information of the selected camera is displayed on the **ATI** StreamConnect panel on the right, if the port has been associated to an ATI switch port.

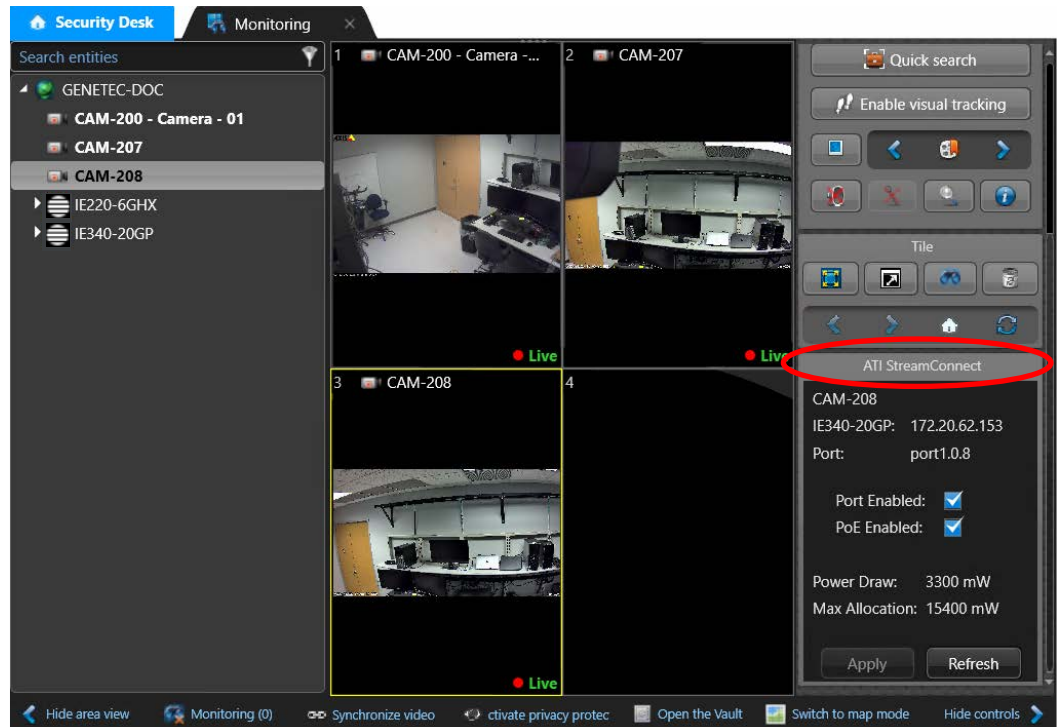


Figure 33. Monitoring Page on Security Desk

The port information of the selected camera is displayed on the **ATI StreamConnect** panel on the right, if the port has been associated to an ATI switch port.

If the StreamConnect panel does not appear, check the following:

- ☐ Ensure that the StreamConnect software has been properly installed on the machine.
 - ☐ Ensure that there are sufficient StreamConnect connection instances available on the license. Refer to “Genetec™ Licensing Requirement” on page 14 to verify the number of available connection instances on your system.
 - ☐ Ensure that the camera has been properly associated with an ATI switch port.
4. To disable the port, uncheck the checkbox for the **Port Enabled**.
To enable the port, check the checkbox for the **Port Enabled**.
 5. To disable PoE on the port, uncheck the checkbox for the **Power over Ethernet**.
To enable the port, check the checkbox for the **Power over Ethernet**.
 6. Click **Apply**.

The changes you made are applied.

Managing User Access

You can assign different sets of ATI StreamConnect access privileges to a user or user group.

StreamConnect Privileges

Table 1 shows three types of privileges, their allowed tasks, and where to perform these tasks.

Table 1. ATI StreamConnect Privileges

StreamConnect Privilege	Allowed Tasks	Access and Instructions
Configure ATI Switches	☐ Add and delete an ATI switch ☐ Modify the settings of an ATI switch, such as an IP address and credentials of the added ATI switch ☐ Assign cameras to ATI switch ports ☐ Modify camera assignments to ATI switch ports	Area View on Config Tool See the following links: ☐ “Adding an Allied Telesis Switch” on page 24 ☐ “Associating Cameras to Allied Telesis Switch Ports” on page 27
Administer ATI Switches	☐ Enable or disable an ATI switch port ☐ Enable or disable PoE on an ATI switch port ☐ View the PoE power draw and maximum power allocation on an ATI switch port ☐ Change the maximum power allocation of a switch port ☐ Reboot an ATI switch	ATI Switch Management on Config Tool or Security Desk See the following links: ☐ “Enabling Ports and Power over Ethernet, or Modifying Power Allocation” on page 34 ☐ “Viewing the Power Consumption on the ATI Switch and Ports” on page 32 ☐ “Rebooting the ATI Switch” on page 35
Operate ATI Switch Ports	☐ Enable or disable an ATI switch port ☐ Enable or disable PoE on an ATI switch port ☐ View the PoE power draw and maximum power allocation on an ATI switch port	Monitoring on Security Desk See the following links: ☐ “Enabling Ports and Power over Ethernet Using Security Desk” on page 36 ☐ “Viewing the Power Consumption on the ATI Switch and Ports” on page 32

Guidelines to Setting ATI StreamConnect Privileges

Here is a list of guidelines for assigning privileges for a user or user group:

- ❑ ATI switch configuration can be performed only on **Config Tool** on the main server. Even if a user or user group is permitted to the Configure ATI Switches privilege, without access to **Config Tool**, the user or user group cannot perform the tasks that the Configure ATI Switches privilege allows.
- ❑ Typical video monitoring operators only require the Operate ATI Switch Ports privilege. The tasks that the Operate ATI Switch Ports privilege allows for are:
 - Application privileges > Security Desk
 - Task Privileges > Operation < Monitoring
 - Action Privileges > Cameras > View Live Video

Assigning ATI StreamConnect Privileges for a User or User Group

To assign or modify ATI StreamConnect privileges for a user group or user:

1. Open **Config Tool** and log in.

The **Config Tool** window appears.

2. Click the **User management** icon. See Figure 34.

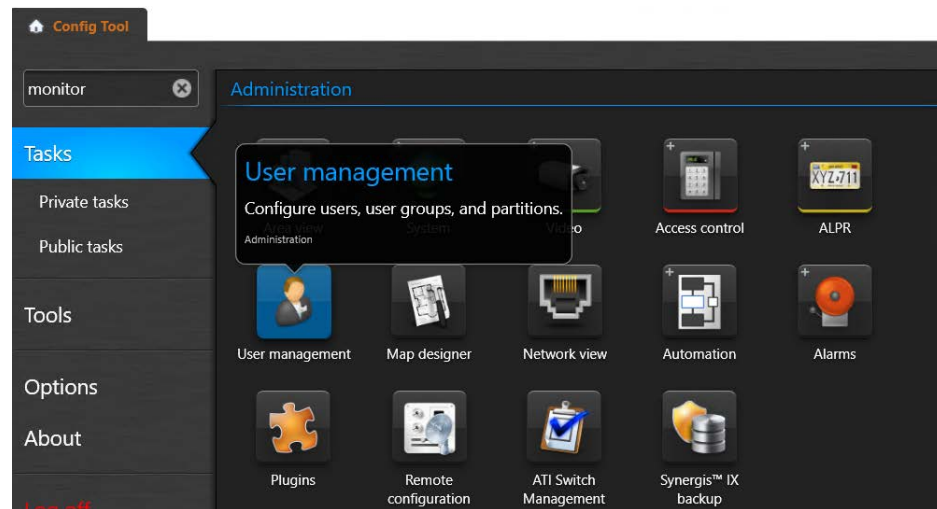


Figure 34. User Management on Config Tool

The User management page appears.

3. Click a user or user group in the left pane on the User management page.
4. Click **Properties** in the main pane. See Figure 35 on page 40.

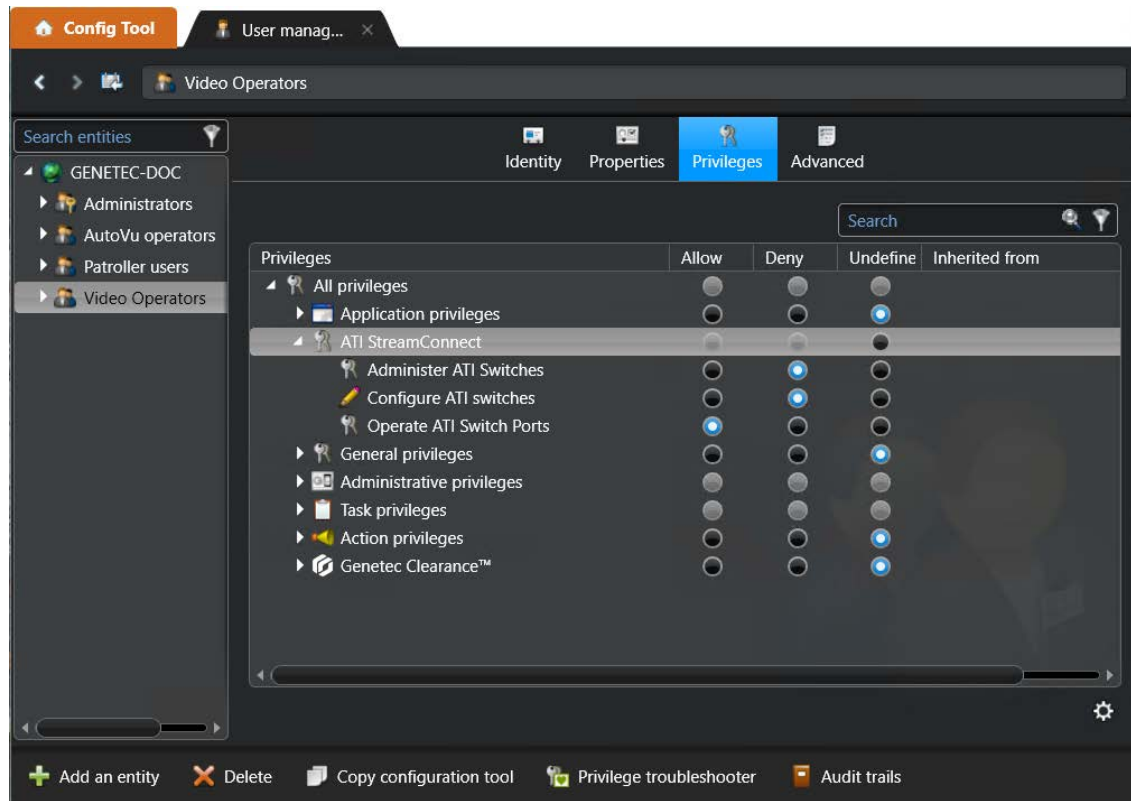


Figure 35. User Management Page

5. Change ATI StreamConnect privilege settings by choosing the radio buttons for the following options for ATI StreamConnect:
 - ☐ **Administer ATI Switches**
 - ☐ **Configure ATI Switches**
 - ☐ Operate ATI Switch Ports
6. Change privileges other than ATI StreamConnect if necessary.
7. Click **Apply**.

The changes are applied.

Limiting User Access to Cameras, Switch, StreamConnect

Genetec™ Security Center offers a feature that allows you to restrict user access to specific entities, such as cameras and switches, using partitions.

If you want only designated users or user groups to access a specific group of switches and connected cameras, with Genetec™ Security Center's partitioning mechanism, you can group these entities together into a partition and configure only those users or user groups to have access to the partition.

Note

Allied Telesis recommends that all cameras, switches, and plugin instances that are logically associated together be placed within the same partition. If different partitions are used for a camera, its connected switch, and the associated plugin instance, then a user must have access to all of those partitions to operate the StreamConnect plugin correctly.

Here are four steps to limit user access using a partition:

- ❑ "Creating a Partition" on this page
- ❑ "Moving Entities into the Partition" on page 44
- ❑ "Moving Plugin Instances into the Partition" on page 45
- ❑ "Limiting a User or User Group to Access only Entities in Partitions" on page 46

Creating a Partition

To create a partition:

1. Open the **Area View** task in Config Tool.
2. Click **Add an Entity** and select **Show All > Partition**. See Figure 36 on page 42.

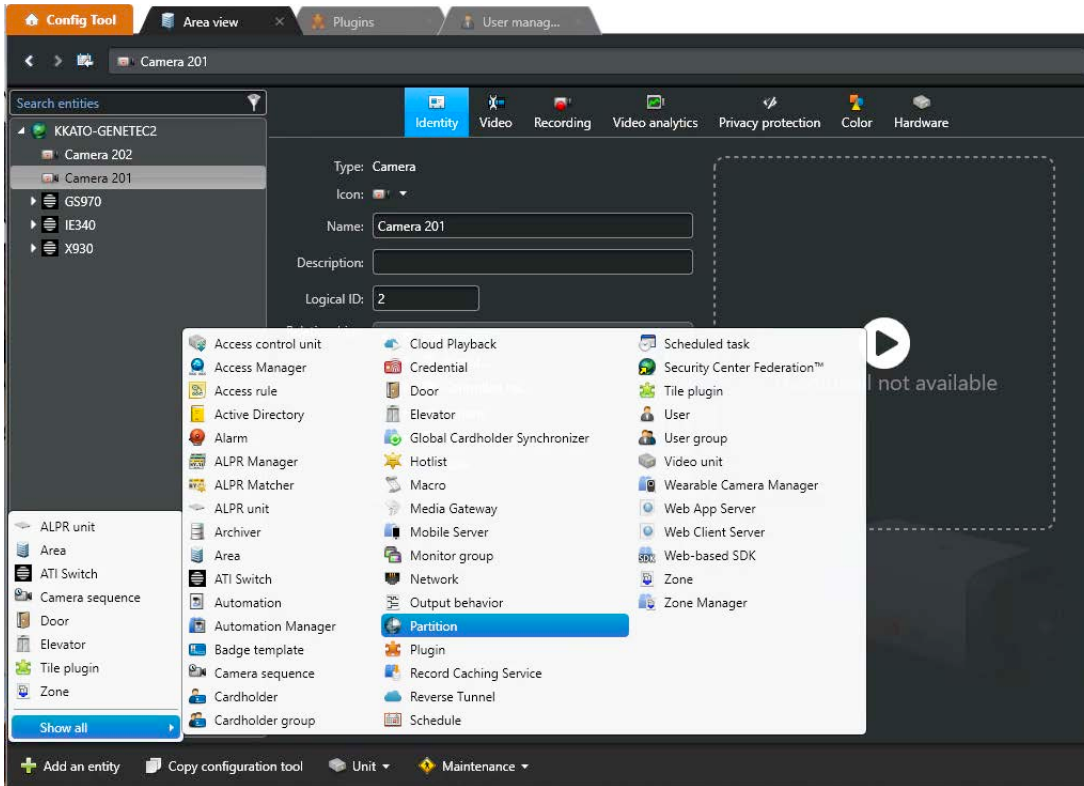


Figure 36. Area View > Add an Entity >Show All > Partition

The Creating a Partition window appears.

3. At the prompt, enter a name for the partition and optionally add a description. See Figure 37.

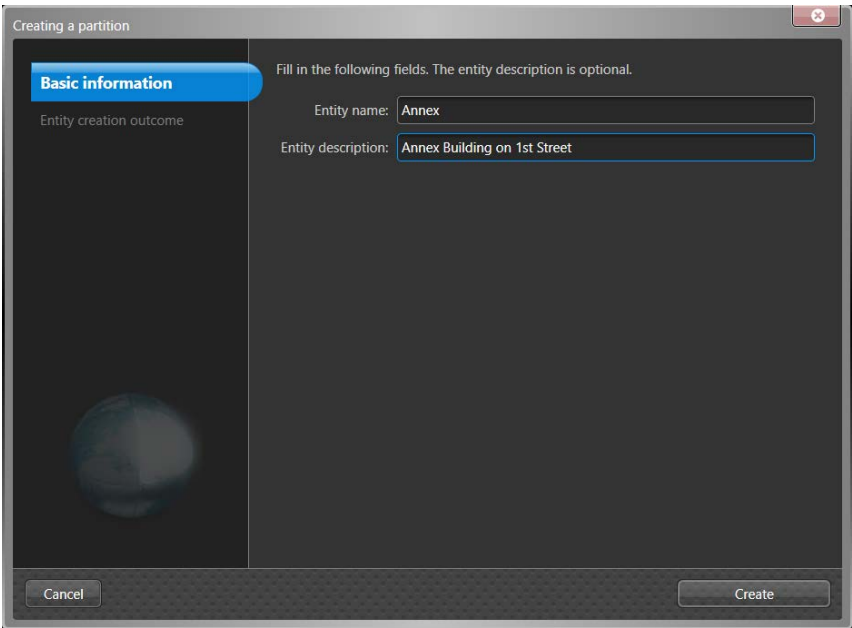


Figure 37. Creating a Partition Window

4. Click **Create**.

The message “The operation was successful” appears See Figure 38.

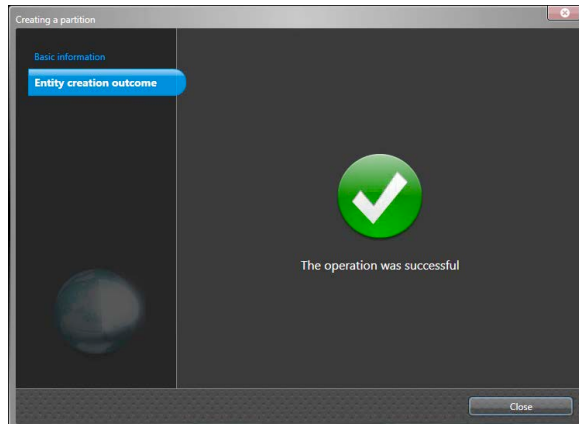


Figure 38. Creating a Partition Successfully Window

5. Click **Close**.

The new partition should appear in the left panel as shown in Figure 39.

Note

If the new partition does not appear, click the blue pie-shaped icon in the **Search entities** block.

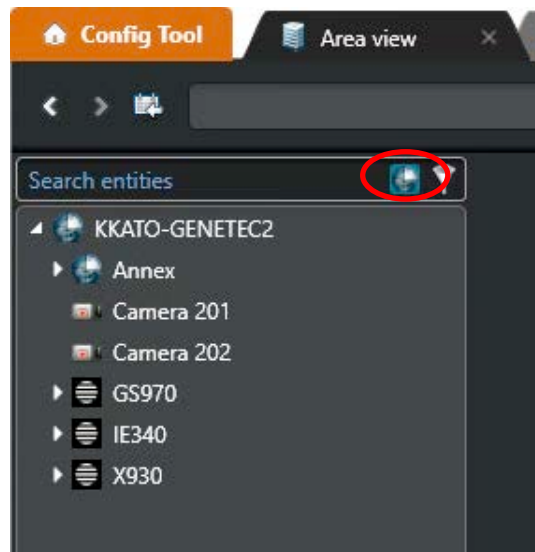


Figure 39. Partition in the Left Panel

Moving Entities into the Partition

6. Drag entities such as cameras and switches into the new partition. See Figure 40.

Note

Cameras and their associated switches should be placed in the same partition.

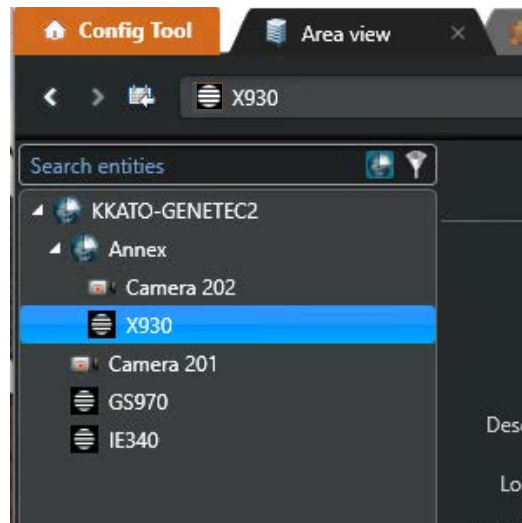


Figure 40. Moving Entities to the Partition

If multiple StreamConnect instances are running on different expansion servers, identify each switch's associated instance by clicking the **Properties** tab for the switch. See Figure 41.

In this example, the x930 switch is associated with the plugin "ATI StreamConnect GENETEC2."

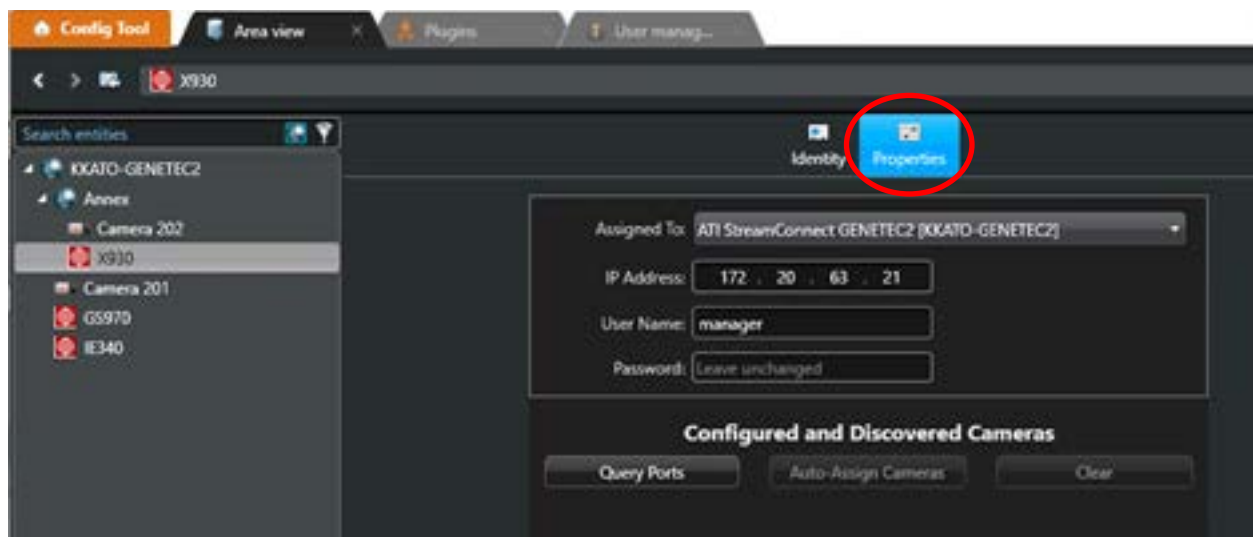


Figure 41. Properties of the Switch

Moving Plugin Instances into the Partition

- Open the **Plugins** task in **Config Tool**.

The **Plugins** page appears.

Note

If the new partition does not appear, click the blue pie-shaped icon in the **Search entities** block. See Figure 42.

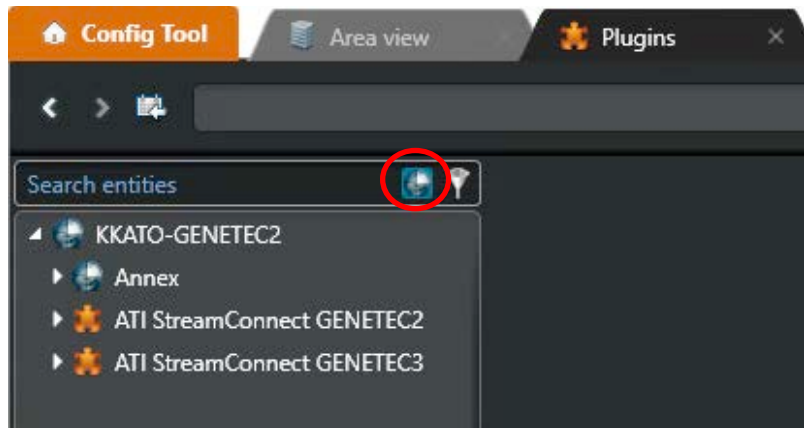


Figure 42. Showing Plugins

- Drag plugin instances into the partition if they are associated with switches that have been moved into the partition.

In Figure 41 on page 44, the **ATI StreamConnect GENETEC2** plugin instance is associated with the x930 switch in the **Annex** partition. That plugin instance should be moved into the partition.

The window to select options in Figure 43 appears.



Figure 43. Selection of Moving Children's Entities to the Partition

- Select **Add entities and their children** to move the plugin instance into the partition.

The instance is moved in the partition. See Figure 44 on page 46.

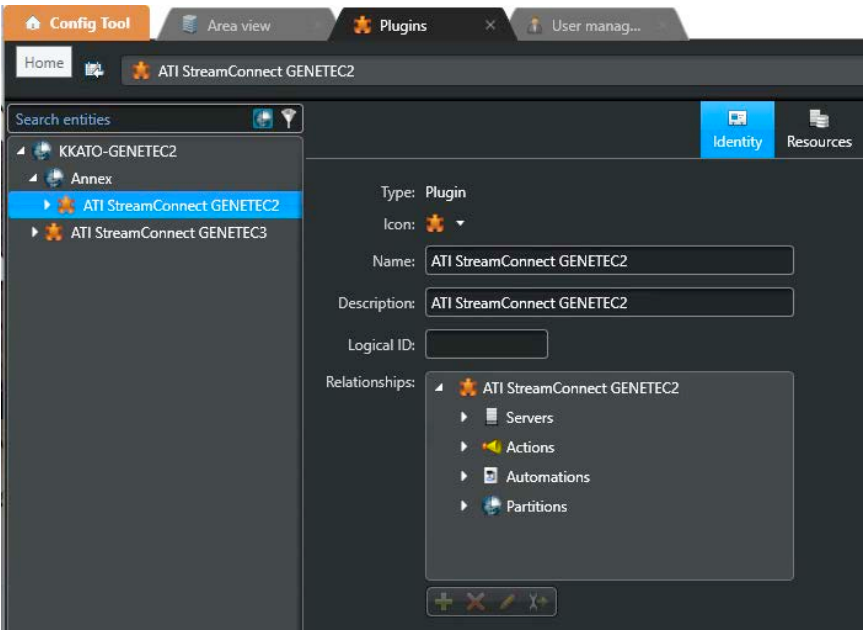


Figure 44. Plugin Instance in the Partition

**Limiting a User
or User Group to
Access only
Entitles in
Partitions**

- 10. Open the **User Management** task in **Config Tool**.
The **User management** page appears.
- 11. Click a user or user group in the left pane.
- 12. Click the **Access rights** tab in the main pane. See Figure 45.

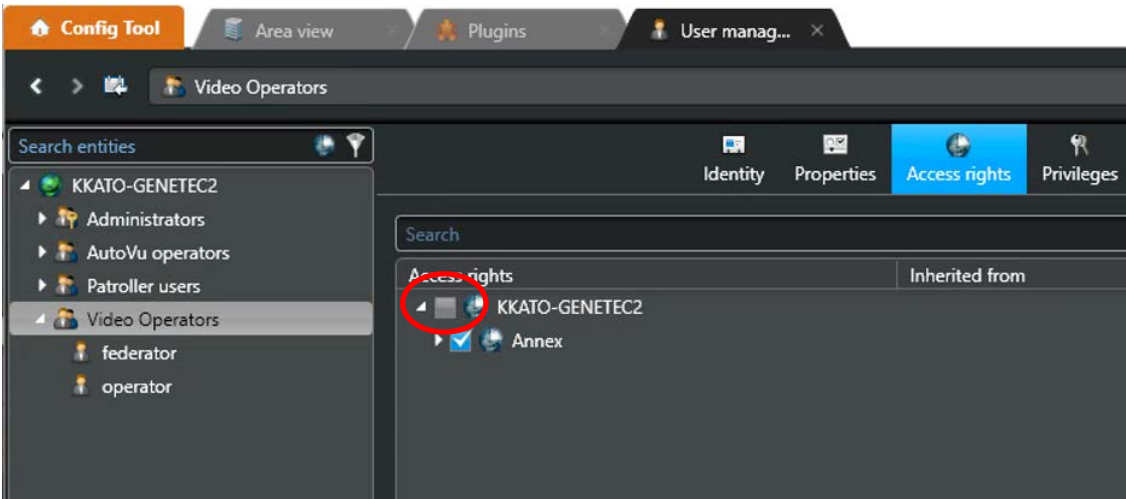


Figure 45. User Management > User or User Group > Access Right Tab

13. Uncheck the root partition access.

The root partition typically has the name of the directory server. In this example in Figure 45 on page 46, the name is “KKATO-GENETEC2.”

14. Check the only the partitions to which the user or user group should have access.

This example restricts the “Video Operators” user group to the “Annex” partition. It means that these users are not allowed to access any cameras, switches, or plugin instances outside this partition.

Accessing StreamConnect in Security Center Federation™

StreamConnect supports Security Center Federation™. Here are guidelines for operating StreamConnect in Security Center Federation™ systems:

- ❑ StreamConnect version 2.1 or later supports Security Center Federation™.
- ❑ StreamConnect version 2.1 is backwards compatible with version 2.0.2.9; however, Security Center Federation™ features are only available if all client and server machines are upgraded to version 2.1.
- ❑ With Security Center Federation™, users can control and manage ATI Switches in the Federation™ host system from a remote system.

This includes:

- Managing an ATI switch and its ports using the ATI Switch Management task in the Config Tool or Security Desk applications.
- Managing an ATI switch port using the StreamConnect tile widget plugin in the Monitoring task of the Security Desk application.
- ❑ StreamConnect does not support the Area View task of Config Tool, such as adding, deleting, or changing ATI Switch configurations from a remote system.
- ❑ When configuring Security Center Federation™, you must grant the following privileges to the Federation™ role's user account to permit StreamConnect to function correctly:
 - Application Privileges -> Security Center Federation™
 - ATI StreamConnect -> (All privileges)
 - Administrative Privileges -> Physical Entities -> View Camera Properties
 - Administrative Privileges -> Physical Entities -> View Video Unit Properties
 - Action Privileges -> Cameras -> View live video

Note

To grant these privileges, see “Assigning ATI StreamConnect Privileges for a User or User Group” on page 39.
